

Подходящие модели холодильников SAMSUNG

RF44A5002S9/UA, RF44A5002S9/WT RF44A5002S9/ZS, RF49A5002SR/TR, RF49A5202S9/PE, RF49A5202SL/LV, RF50A5002S9/EE, RF50A5002S9/EF RF50A5002S9/EG RF50A5002S9/EO RF50A5002S9/EU RF50A5202S9/EF RF50A5202S9/EG, RF50A5202S9/EO, RF50A5202S9/EU, RF50A5202S92EF, RF50A5202SL/EF, RF57A5032S9/TL, RF57A5032SL/TL, RF57A5232SL/TL, RF5GA5202S9/EG, RF62DEPN1/XSV, RF62DERS1/XSE, RF62DESL1/GH, RF62DESL1/XZS,	RF62JBSL1/XSA, RF62NEPN1/XME RF62NEPN1/XSE, RF62NEPN1/XSG RF62NEPN1/XTL RF62NERS1/XTC RF62QEPN1/XEE, RF62QEPN1/XEF RF62QEPN1/XEO, RF62QEPN1/XEU, RF62QERS1/EUR RF62QERS1/XEF, RF62QERS1/XEO RF62TBPN1/XM, RF62HEPN1/BWT, RF62HEPN1/XEE, RF62HEPN1/XEF, RF62HEPN1/XEU RF62HERS1/BZ, RF62HERS1/XEF RF62HERS1/XEO, RF62HERS1/XSH RF62HESL/ZS,	RF62TBPN1/XSA, RF62TBPN1/XSS, RF62TBPN2/XAZ, RF62TBSL1/XSA, RF62TBSL1/XZS, RF62UBPN1/BWT RF62UBPN1/XEF, RF62UBPN1/XES, RF62UBRS1/BWT, RF62UBRS1/XES, RF62UBSL1/XSA, RF62WBPN1/XSS, RF62WBPN2/XSA RF67DEPN1/GSL, RF67DEPN1/HAC, RF67DEPN1/
--	--	--