

Совместим со следующими моделями:

RT72BAEW1/BDW	RT77KBTS1/BWT	RT72VBPC1/XET	RT72SBEW1/HAC
RT72BASW1/TAC	RT77KBTS1/HAC	RT72VBTC1/XET	RT72SBEW1/MTR
RT72BBEW1/HAC	RT77KBTS1/XFA	RT77BAEW1/BDW	RT72SBPN1/BDW
RT72BBMG1/SAH	RT77KBTS1/XTL	RT77BASW1/ABS	RT72SBPN1/MTR
RT72BBPN1/HAC	RT77SAMB1/SML	RT77BBEW1/HAC	RT72SBPN1/SML
RT72BBPN1/MTR	RT77SASM1/TAC	RT77BBPN1/HAC	RT72SBPN1/TAC
RT72BBSM1/BDW	RT77SASW1/ATC	RT77BBPN1/XMA	RT72SBPN1/XME
RT72BBSM1/HAC	RT77SASW1/BDW	RT77BBPN1/XSG	RT72SBPN1/XSG
RT72BBSM1/MTR	RT77SASW1/FAL	RT77BBSM1/ABS	RT72SBSL1/BWT
RT72BBSM1/TAC	RT77SASW1/JUM	RT77BBSM1/ATC	RT72SBSM1/ATC
RT72BBTS1/HAC	RT77SASW1/SML	RT77BBSM1/BDW	RT72SBSM1/BWT
RT72BBTS1/MTR	RT77SASW1/TAC	RT77BBSM1/HAC	RT72SBSM1/JUM
RT72KASE1/EUR	RT77SASW1/ZAM	RT77BBSM1/JUM	RT72SBSM1/MTR
RT72KASE1/XSS	RT77SASW2/ATC	RT77BBSM1/XTL	RT72SBSM1/SML
RT72KASM1/TAC	RT77SASW2/JUM	RT77BBTS1/ATC	RT72SBSM1/TAC
RT72KASW1/TAC	RT77SAVB1/SML	RT77BBTS1/ELA	RT72SBSM1/XME
RT72KASW1/ZAM	RT77SBPN1/SML	RT77BBTS1/HAC	RT72SBSM1/XTL
RT72KBEW1/HAC	RT77SBPN1/TAC	RT77BBTS1/JUM	RT72SBSM1/ZAM
RT72KBPN1/XEF	RT77SBPN1/XMA	RT77KASE1/XSS	RT72SBTS1/ATC
RT72KBPN1/XET	RT77SBPN1/XTR	RT77KASM1/TAC	RT72SBTS1/BWT
RT72KBSL1/XTL	RT77SBSL1/XSE	RT77KASW1/TAC	RT72SBTS1/JUM
RT72KBSM1/EUR	RT77SBSM1/SML	RT77KAVB1/BWT	RT72SBTS1/MTR
RT72KBSM1/HAC	RT77SBSM1/TAC	RT77KAVB1/XET	RT72SBTS1/SML
RT72KBSM1/XET	RT77SBSM1/XME	RT77KBEW1/HAC	RT72SBTS1/XME
RT72KBSM1/XTL	RT77SBSM1/XST	RT77KBPN1/BDW	RT72SBTS1/ZAM
RT72KBTS1/XET	RT77SBSM1/ZAM	RT77KBPN1/HAC	SR592YS
RT72KBTS1/XTL	RT77SBTS1/SML	RT77KBPN1/TAC	
RT72SAMB1/SML	RT77SBTS1/XMA	RT77KBPN1/XFA	
RT72SASE1/XSS	RT77SBTS1/XME	RT77KBPN1/XSE	
RT72SASM1/TAC	RT77VAVC1/XET	RT77KBPN1/XSS	
RT72SASW1/ANU	RT77VBPC1/XET	RT77KBPN1/XST	
RT72SASW1/ATC	RT77VBSE1/XET	RT77KBSE1/XET	
RT72SASW1/BDW	SR562VC	RT77KBSL1/BWT	
RT72SASW1/BWT	SR562VS	RT77KBSL1/XTL	
RT72SASW1/JUM	SR562VU	RT77KBSM1/BWT	
RT72SASW1/SML	SR562YC	RT77KBSM1/HAC	
RT72SASW1/TAC	SR562YS	RT77KBSM1/TAC	
RT72SASW1/ZAM	SR562YU	RT77KBSM1/XFA	
RT72SASW2/JUM	SR592VC	RT77KBSM1/XTL	
RT72SAVB1/BWT	SR592YC	RT77KBSW1/XET	